

BOCCE-MIX® INSTALLATION INSTRUCTIONS

Instructions for a typical 10' x 60' court requiring approximately six and one half (6 1/2) tons of Bocce-Mix® to result in approximately an inch and a half (1.5") to two (2") inch depth.

1 MAKE SURE that court drains satisfactorily and that the existing grade is compacted and leveled prior to installing Bocce-Mix®.

2 Choose to either Drum Roll or Vibratory Plate Compact Bocce-Mix® then follow the appropriate compacting method steps below.

DRUM ROLLER

It is recommended that Bocce-Mix® be installed one (1) inch depth at a time when using the Drum Roller for compacting.




3 Spread 1 inch of Bocce-Mix® evenly throughout court.

4 Level Bocce-Mix®



5 Thoroughly saturate Bocce-Mix® with water.
(Note: You cannot over water)

6 Once Bocce-Mix® is still moist, but not completely dry, compact using Drum Roller.

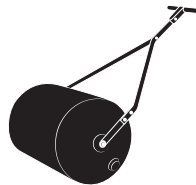

Repeat steps 3 - 6 with 2nd inch of Bocce-Mix®

VIBRATORY PLATE COMPACTOR

Use entire order of Bocce-Mix® when using the Vibratory Plate Compactor .



3 Spread Bocce-Mix® evenly throughout court.

4 Level Bocce-Mix®



5 Thoroughly saturate Bocce-Mix® with water.
(Note: You cannot over water)

6 Once Bocce-Mix® is still moist, but not completely dry, compact using Vibratory Plate Compactor.
(Note: Do NOT over compact)



7 Broom finish Bocce-Mix® surface to remove compaction lines.



8 Allow Bocce-Mix® surface to fully dry before game play.



TIME TO GET YOUR BOCCE ON!

Please contact BCA with any questions

admin@boccecourtsamerica.com • 480.990.2229